

MEVOTECH INSIDER

Service Tips and Best Practices



Rear Stabilizer Bar Link Installation: 2020-2014 Tesla Model S

Brand	Supreme		Product	Stabilizer Bar Link	Date	July 2021
Part Number(s)		MS958	310			



Installation Notes: General

- Discard old nuts and bolts. Do not reuse hardware.
- Inspect all mating surfaces and replace mating components if damaged or out of specification conditions are found.
- Remove all rust, burrs and other contaminants from all mating surfaces.
- If the ball stud is broken, bent or loose, the mating components must be inspected and replaced if there is deformation, an out-of-round condition or damage.
- Use only a calibrated torque wrench for all fastening procedures at correct preloaded vehicle ride height.
- If vehicle is equipped with air suspension, deflate both front air bags before commencing repair.




Publication Number: MI-21-141-01-01-E




Installation Notes: Stabilizer Bar Link to Steering Knuckle and Rear Lower Control arm

See Figure 1 for stabilizer bar link to stabilizer bar and rear lower control arm fastening values.

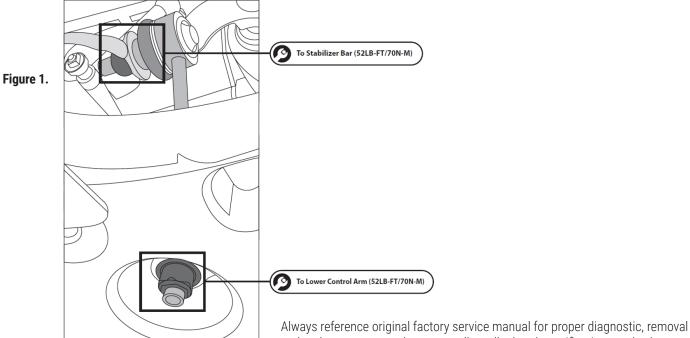

and replacement procedures, as well as all related specifications and values.

For parts go to: mevotech.com



Technical Support Hotline: 1.844.572.1304